



Getting Started And Setting Up The Printer

1. Make sure the printer and meter batteries are charged.
2. Verify that there is thermal paper in the printer.
3. Be sure to have test patient or control strip test results available prior to printing.
4. Make sure Bluetooth® is on in the Coag-Sense meter; Settings>Communication Settings>Bluetooth.
5. The maximum communication distance is approximately 10 meters.
6. The Seiko MP-B20 printer can only be used with the new Coag-Sense PT2 Meter.

Activity

Display/Visual Aid

Step 1

Press the Results button from the home screen and choose Patient Test or Control Test.

Step 2

Available test results will appear with the most recent result first. Select the desired test result to access the printing option.

Step 3

From the individual result display, click the printer icon on the lower-right hand corner of the screen to print the test results.

Step 4

The user may choose from three different printer connection modes. To print using a Bluetooth connection, select Bluetooth.

Step 5

The portable printer needs to be in pairing mode for the Coag-Sense meter to detect it. While the printer is off, hold the power button for 5 seconds until the green LED light flashes rapidly.
Note: The printer becomes visible to the meter and enters pairing mode for 60 seconds.

Step 6

The printer name will appear on the Coag-Sense meter as the model number. Select it to complete the pairing process.

Step 7

The printer is now paired with the Coag-Sense meter. Select the return arrow to return to the print screen, then click the Print button to print the test result.

Step 8

Turn the printer off to conserve the battery.



ID	Date/Time	INR
aa	05/09/2018 11:21 am	2.7
bb	05/09/2018 11:15 am	3.4
aa	04/26/2018 4:27 pm	2.9

